


VONDOM

Colección QUARTZ/QUARTZ Collection
instrucciones de montaje/assembly instructions




(A)

M6 x 14 mm
x8




(B)

M6 x 25 mm
x8




(C)

M6 x 30 mm
x4




(D)

StackingTop
Tope Apilado.
x4




(E)

Leg
Pata
x4

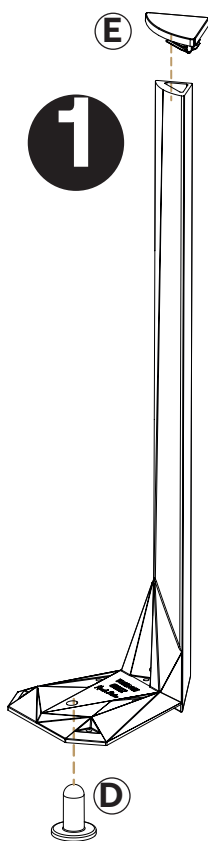

1

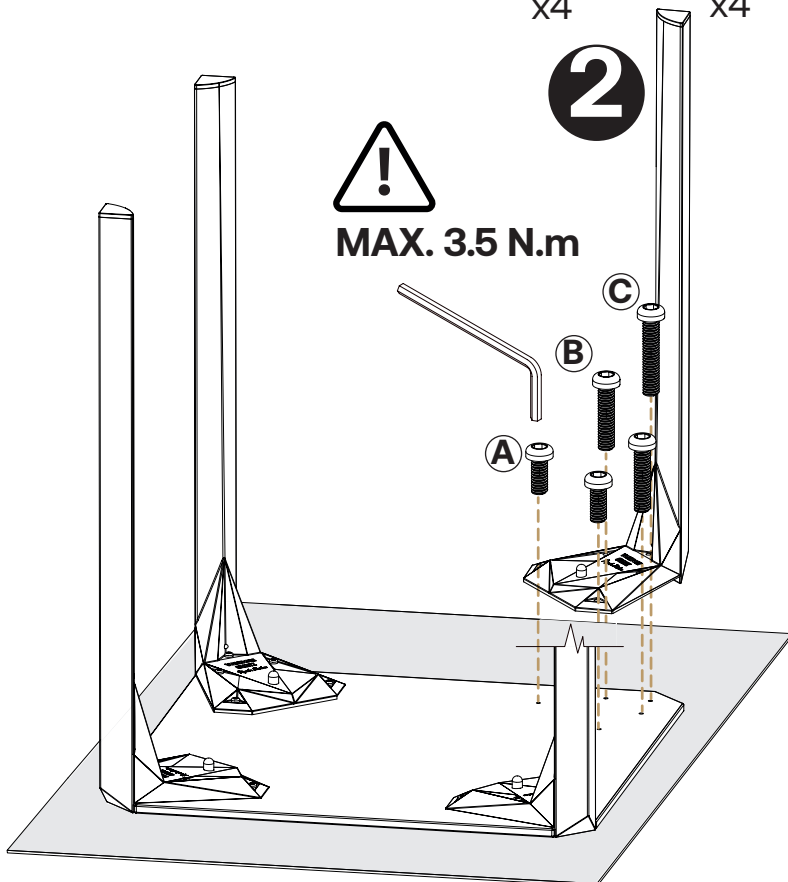

2



MAX. 3.5 N.m


VONDOM

Colección QUARTZ/QUARTZ Collection
instrucciones de montaje/assembly instructions




(A)

M6 x 14 mm
x6




(B)

M6 x 25 mm
x6




(C)

M6 x 30 mm
x3



(D)

StackingTop
Tope Apilado.
x3





(E)

Leg
Pata
x3



MAX. 3.5 N.m

2

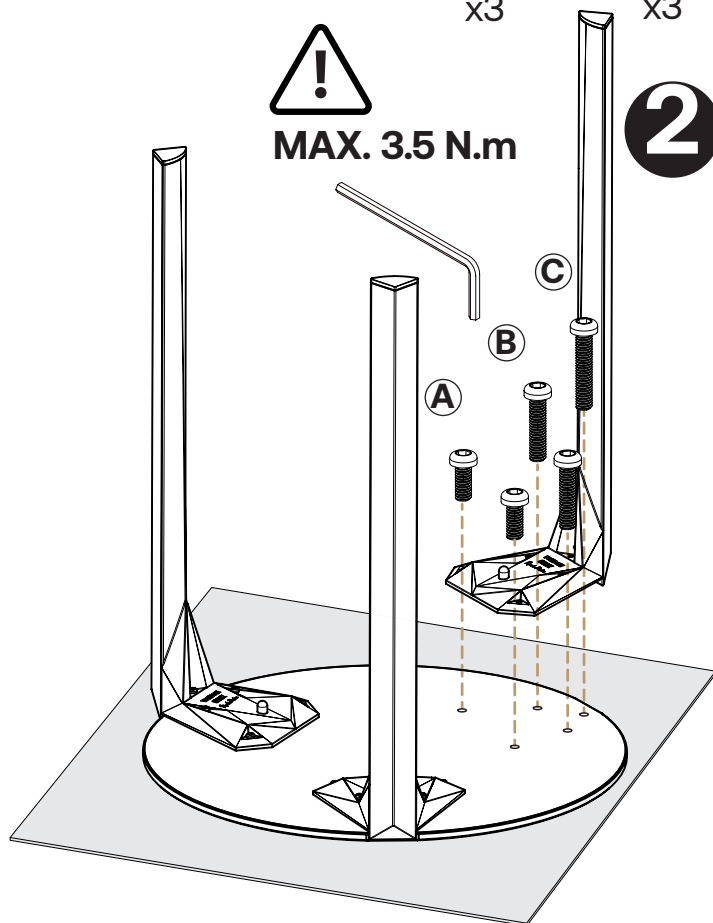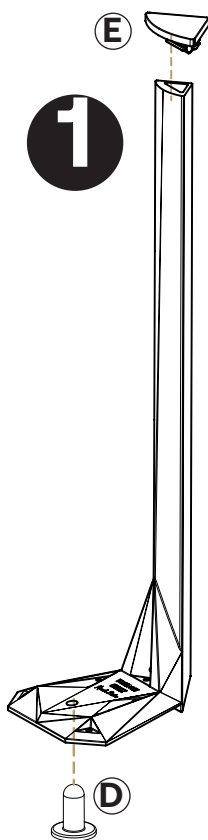


VONDOM

Colección QUARTZ/QUARTZ Collection
instrucciones de montaje/assembly instructions




(A)

M6 x 14 mm
x8




(B)

M6 x 25 mm
x8




(C)

M6 x 30 mm
x4



(D)

StackingTop
Tope Apilado.
x4



(E)

Leg
Pata
x4

1

(E)



2



MAX. 3.5 N.m

